



Camera will only be on in reverse

SMW7B Buttonless Monitor - Wide Angle


Required Components for Installation:

- (1) MK07B Monitor w/ monitor harness
- (1) C300P Camera w/ mounting template
- (1) ADD300Z Camera Cover w/ Stainless mounting hardware
- (1) CB021 20m. – 65' FM/FM Camera Cable
- (1) ADD22H Heavy Duty Mount
- (1) Remote
- (1) Manual

Wire Connection Key:

Red wire to Ignition hot (+) 10-24v. DC
 Brown trigger wire for camera 1 to backup light.
 Black wire to ground block or ground post GND (-)

Scan QR Code for printable camera template.

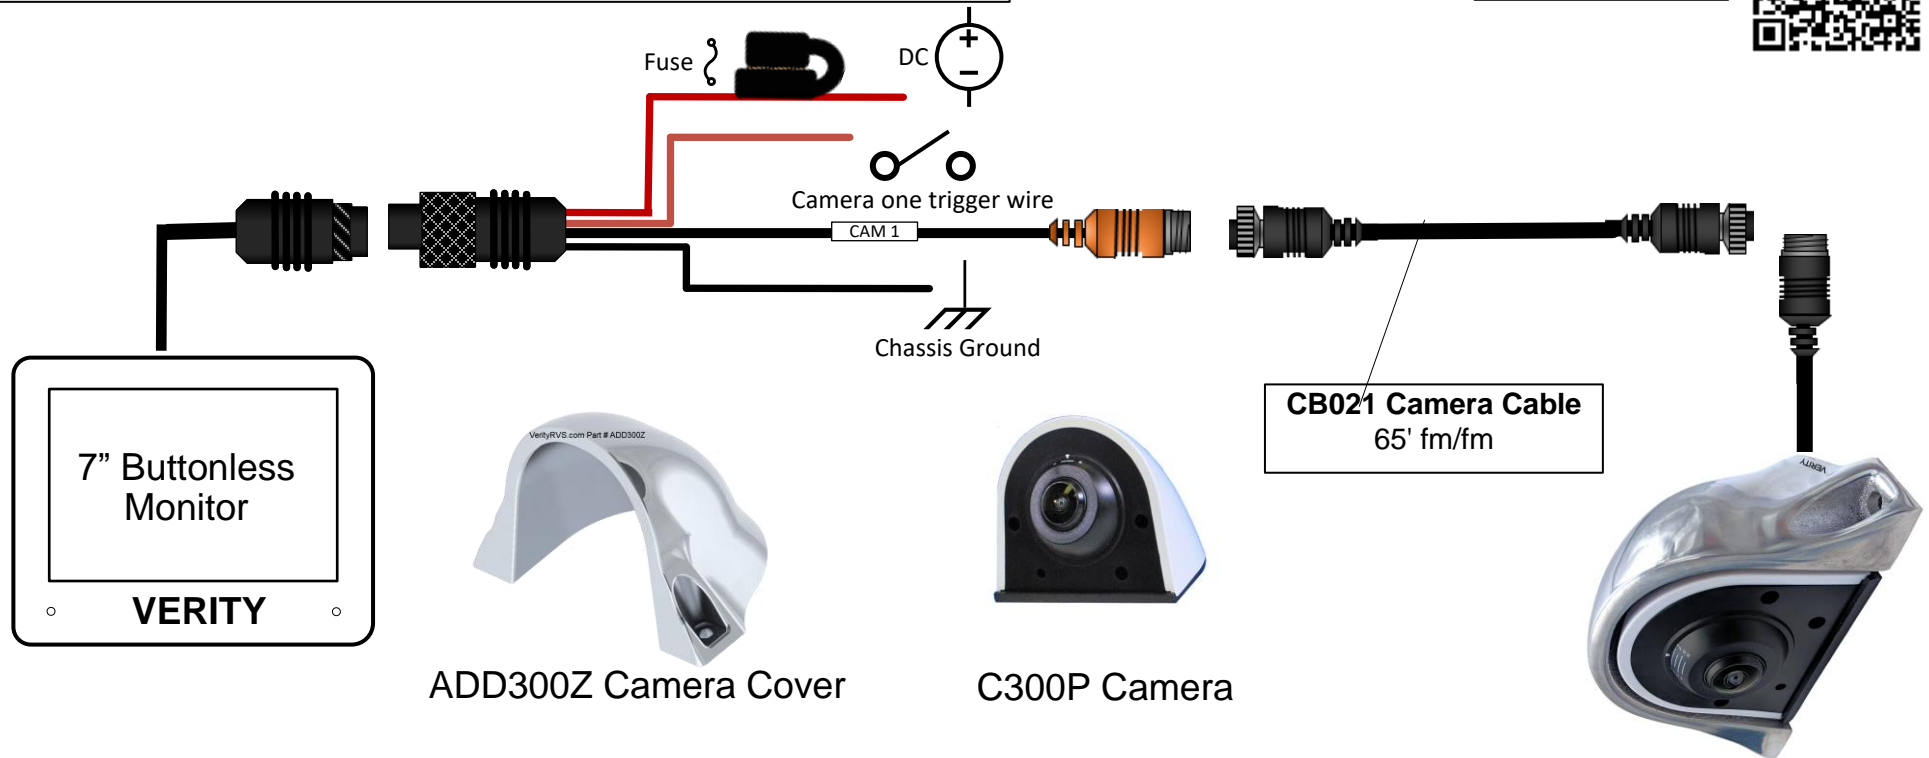

574-807-6004

www.veritysafe.com
All rights reserved.

NOTICE

Diagram is for reference purpose only
Subject to change without notice. Not to Scale

1/01/23

Buttonless monitor