VERITY

SMW7J Day Cab Wiring

SM7WJ Day Cab Wiring

Required Components for Installation:

(1) SMW7J
(1) C300P Camera
(1) ADD25F Heavy Duty Mount
(1) Manual
Ordered and shipped separately from SMW7J system
(1) CB006 5m. 15 ft. FM/FM camera cable
(1) CBS202 trailer socket

Wire Connection Key:

Red wire to **Ignition hot** (+) 10-24v. DC
Black wire to GND (-)
Brown trigger wire for camera 1 to backup light on tractor
~~(Optional) Blue trigger wire for camera 2 to turn signal~~

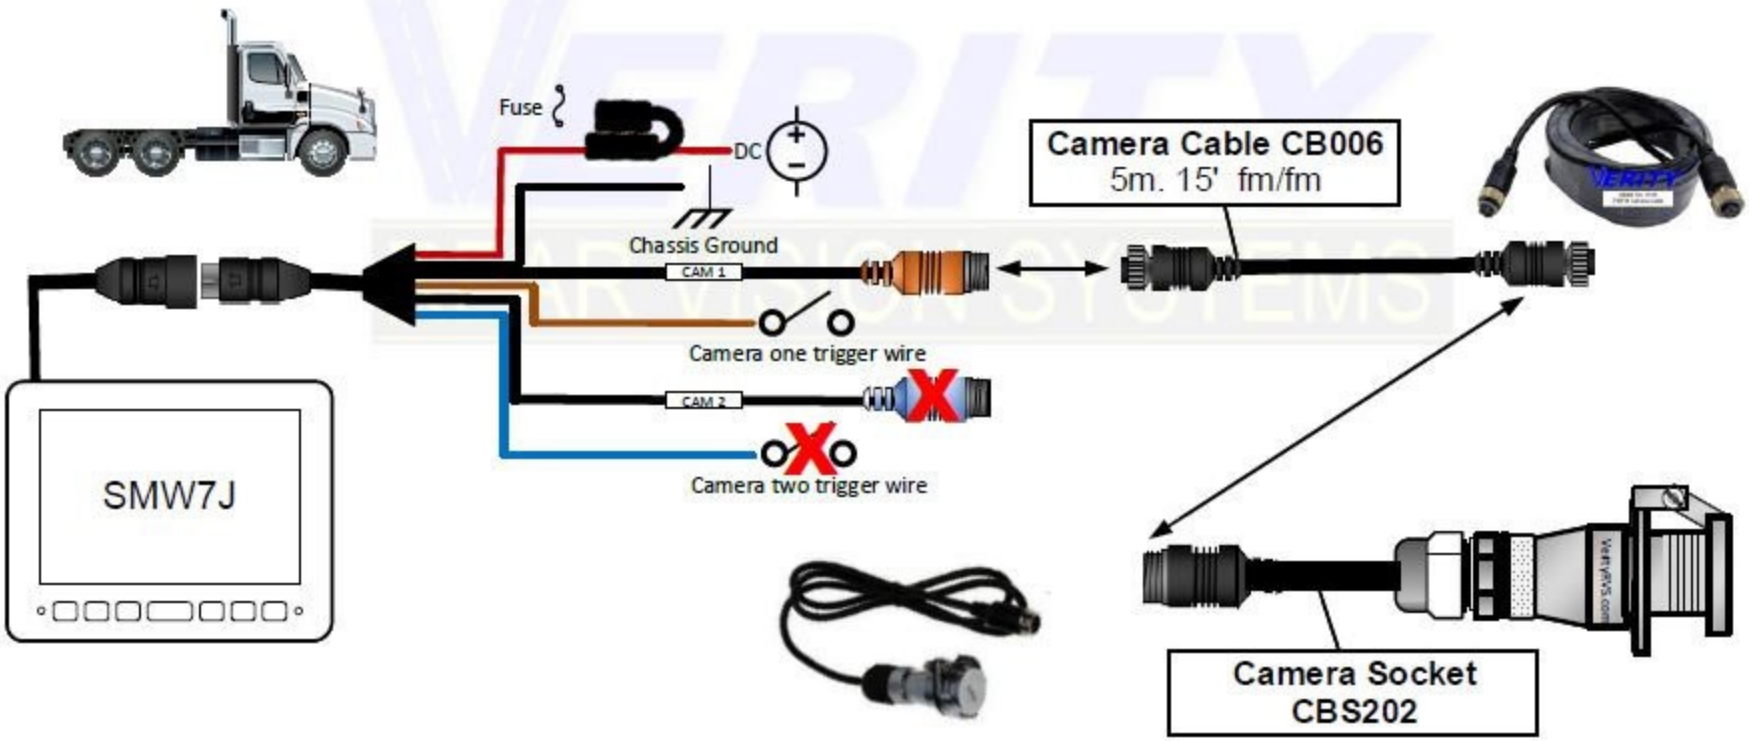

574-807-6002
www.verityrvs.com
All rights reserved.

NOTICE
Diagram is for reference purpose only
Subject to change without notice. Not to Scale

04/2019
REV-4HR

SM07J/SMW7J/SM05J Day Cab Wiring Layout